



PNEUMATICS

WHEN TO SCHEDULE MAINTENANCE CHECKS



PISTON

LUBRICATION: If the vibrator runs continuously, check/refill every 1-3 weeks. Intermittent /infrequent use, schedule on 1-4 months basis depending on use.

FILTER: Follow same scheduling as lubrication checks.

SPRING: Springs are wear-parts & will break over time though when is unforeseeable. Always have a spare on hand!

GASKETS: Follow same scheduling as lubrication/filter checks.

PISTON/BORE: If proper maintenance of lubrication/filter are kept, schedule a piston/bore cleaning annually.



TURBINE

LUBRICATION: Requires no lubrication

FILTER: If the vibrator runs continuously, check/refill every 1-3 weeks. Intermittent /infrequent use, schedule on 1-4 months basis depending on use.

BEARINGS: Bearings are wear parts and will fail over time. Always have a spare on hand!



BALL

LUBRICATION: Requires no lubrication

FILTER: If the vibrator runs continuously, check/refill every 1-3 weeks. Intermittent /infrequent use, schedule on 1-4 months basis depending on use.

BALL/RACES/CAPS: These are all are wear parts and will fail over time. They may sound as if they are working but aren't as effective as when they were first installed. Inspect every 6-12 months.



CLEVELAND
VIBRATOR COMPANY